Part Number: ATEX217 Publish date: July 2021

# **KJ2005X1-BA2 MX Controller**

## Hazardous Atmosphere



II 3G Ex ec IIC Gc FM19ATEX0173U **IECEx FMG 19.0019U** FM21UKEX0017U



CL. I Div. 2 GP. A.B.C.D CL. I Zone 2 AEx/Ex ec IIC Gc FM17CA0145U FM17US0286U

# **Power Specifications**

Local Bus Power +5 VDC at 1.4 A

# **Environmental Specifications**

Ambient Temperature

-40°C to +60°C

Shock 10g 1/2 Sinewave for 11msec

1mm Peak to Peak from 2 to 13.2Hz; Vibration

0.7g from 13.2 to 150Hz

Airborne Contaminants ISA-S71.04 - 1985 Airborne Contaminants Class G3

Relative Humidity 5 to 95% Non-Condensing

Note: Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P2046 "DeltaV™ Scalable Process System Zone 2 Installation Instructions". Other installation instructions are available in the "DeltaV™ M-Series Hardware Installation and Reference" manual.

The communications network connected to the

DeltaV Remote Interface Unit must not be connected to a source that generates or contains under normal conditions a potential in excess of 60 VAC or 75 VDC.

#### Removal and Insertion

This unit cannot be removed or inserted with system power energized unless the area is known to be non-hazardous.

### Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

### Other Safety Approvals







